



Installation manual

Front heat shield for HUSQVARNA 701

To install the heat shield you do not have to remove the header pipe/exhaust, on the pictures it is done for demonstration purposes only. Install the heat shield in the order that pictures follow each other.



Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5

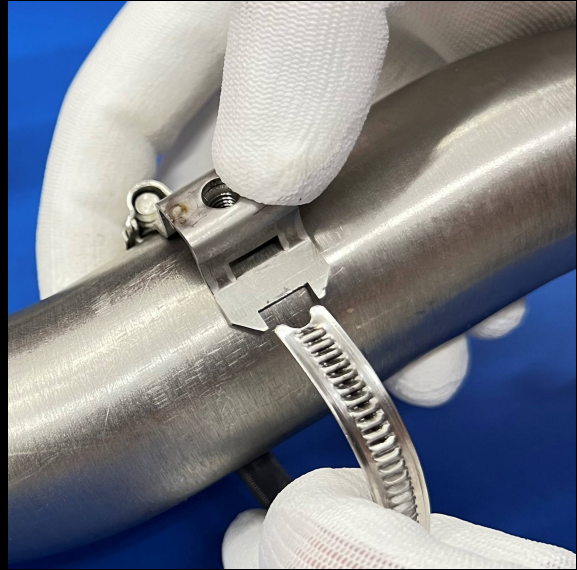


Fig. 6



Fig. 7



Fig. 8



Fig. 9

Once the bolts for the front heat shield are aligned with the nuts underneath tighten the bolts loosely. Then move the shield forth/back till there is a 5 mm – 3/16 inch gap between the front and rear heat shields (Fig.9). After aligning the heat shield tighten both clamps with a tightening torque of 2,5 Nm/1,85 ftlb and bolts with a tightening torque of 4 Nm/2,95 lb ft.

IMPORTANT Retighten the bolts after first ride. Make sure that all the bolts are sufficiently tightened periodically.